

 
Vivitar

Point'n Shoot Camera

Operating instructions

■ LOADING FILM


Slide the film door open to the right and insert the 110 film cartridge.

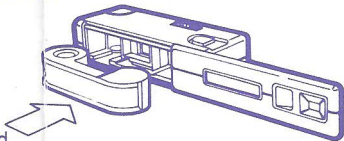

Slide the film door closed and advance the film by operating the film advance lever on the bottom of the camera and pressing the shutter button repeatedly until No. 1 appears in the film window.

■ TAKING PICTURES

Hold camera firmly, aim and press shutter button. Advance film fully until it stops and next exposure number appears in window.

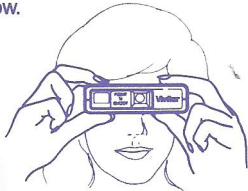

Picture may also be composed vertically.

Daylight picture range: 4 feet to infinity


Best results are obtained in bright daylight conditions.

■ TAKING FLASH PICTURES

Flash pictures may be taken by purchasing Flip Flash bulbs. Insert the Flip Flash into the flash receptacle in the top of the camera. When you have used five flashes, remove Flip Flash and reinsert into camera with unused flashes at the top. Flip Flash can be removed at any time even though all flashes on one end have not been used. When reinserting into camera, make sure that the end containing unused flashes is on top. Flip Flash will automatically switch to unused flashes on that end. Should a bulb fail to flash, the remaining bulbs in that half will not flash. Unused bulbs in opposite half are still operative.

■ UNLOADING FILM

After the last exposure, advance the film until you feel mild resistance. Do NOT attempt to advance the film further. Slide open the film door and remove the film cartridge.

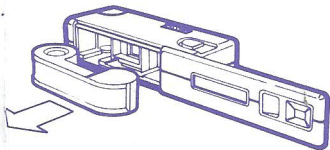

■ CAMERA CARE

DO NOT leave camera in direct sunlight or exposed to extreme temperatures. Use only clean lintless cloth to clean lens or body. DO NOT use in adverse weather conditions.

Warranty

Vivitar products are built to highest quality standards and should provide you with years of satisfaction. This LIMITED 1-year warranty is issued by VIVITAR CORPORATION.

Time Period of This Warranty

The time period of this warranty starts from the date of original purchase and expires on April 1, 1989.

What is Covered by This Warranty

Any part which, because of manufacturing defects or workmanship, fails to function properly under normal use will be repaired at NO CHARGE for parts and labor or, at our option, the product will be replaced.

What is Not Covered by This Warranty

Consequential damages, damages from delay or loss of equipment or damaged film. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Malfunctions resulting from misuse, tampering, unauthorized repairs, modifications or accident.

Removable batteries, battery packs, and/or damage caused by leakage of these batteries, if applicable.

Damage to the product resulting from immersion in, or exposure to, water, chemicals, liquid or fungus.

This warranty gives you specific legal rights and you may have other rights which vary from state to state.

Service

What to Do When Service is Needed

Return product in its original packaging to your Avon Representative.

When sending in a product for service, your package must include the following:

1. A detailed description of the problem.
2. Sample film and/or print, if it relates to the problem.

When service is completed, your Avon Representative will return your product to you at no cost.

Vivitar®

Vivitar Corporation

A Subsidiary of Hanimex Corporation Limited

© 1986 Vivitar Corporation 4/86