


Polaroid
SX-70
Land
Camera
Alpha 1

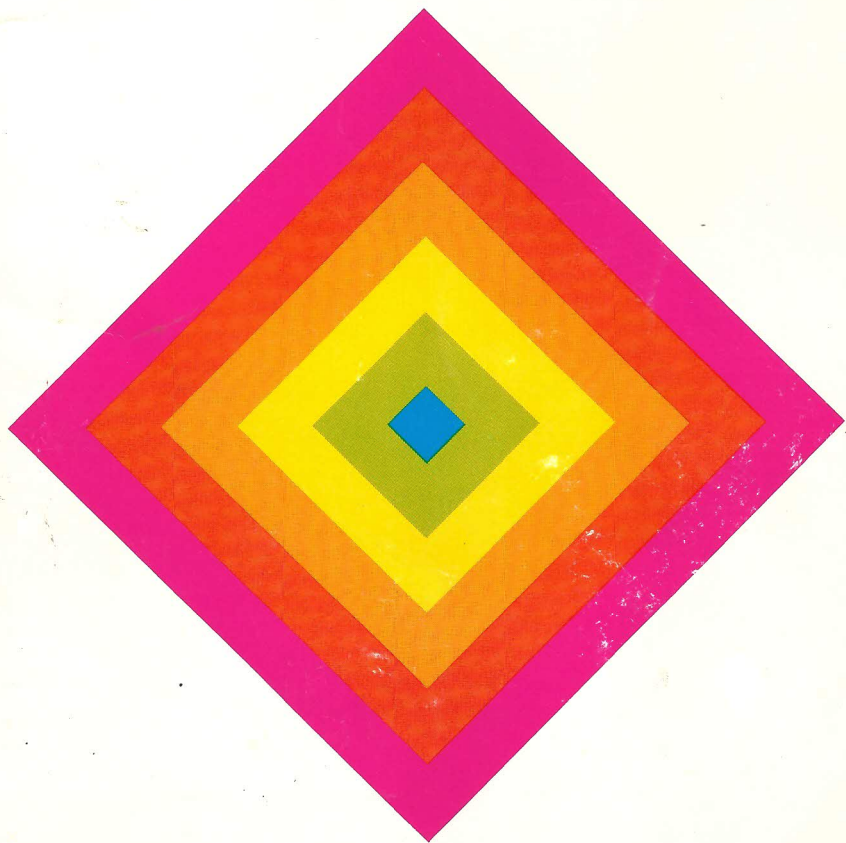



Contents

- 4 Opening & Closing
- 6 Parts of Your Camera
- 8 Holding
- 9 Viewing
- 10 Focusing
- 14 Loading & Unloading
- 16 Shooting
- 18 Daylight Pictures
- 21 Flash Pictures
- 24 Flash in Daylight
- 25 Close-ups
- 26 Time Exposures
- 27 Troubleshooting
- 32 Care of Your SX-70 System
- 33 Our Service Policies
- 35 Warranty
- 36 Polaroid Service Centers

This booklet tells how to take the best pictures with your Polaroid SX-70 Land camera. Your camera may look slightly different from the one in this booklet, but it works exactly the same way. All the information here applies to your camera.

If you ever need more information about taking pictures, call us, free. Our Customer Service representatives are glad to help. We can be reached on weekdays from 8 a.m. to 5 p.m., your time. From anywhere in the continental U.S.A. except Massachusetts, call this number, toll-free:

800-225-1384

From Massachusetts and anywhere in Canada, call collect:

(617) 864-4568

For your convenience, these phone numbers are on your camera, under the lens. You can see them when the film door is open.

*POLAROID
FLASH 2350
1:30
TRIPOD MOUNT
PARTS
500 343 4846*

